



Made for first. Built to last.

DISCLAIMER:
PRODUCTS MADE BY L AND W FAB AND MACHINE INC. ARE INTENDED TO FIT YOUR STOCK UTV UNLESS OTHERWISE SPECIFIED. INSTALLING, MODIFYING, OR REMOVING ANY COMPONENTS (FACTORY OR AFTERMARKET) NOT SUPPORTED BY L AND W AND THE INSTRUCTIONS HEREIN WILL VOID YOUR WARRANTY. FOR MORE INFORMATION ON INSTALLATION, WARRANTY, OR PRODUCT USE PLEASE CALL US AT (770) 445-9778

PRO R/ TURBO R GRILL SIDE VENTS

Fitment: 2022-CURRENT RZR PRO R/ TURBO R



INSTALLATION MANUAL


Parts List:

Item #	Description	Qty.
1	Outer overlay	2
2	mesh	2
3	Inner overlay	2
4	10-24 x 1 ss bolt	10
5	10-24 nyloc nut	10

Installation:


STEP 1:

Place the cover in place on the machine and align along the edges as shown. The mesh and 1 overlay will go to front side. Another overlay will go on back side of factory mesh.

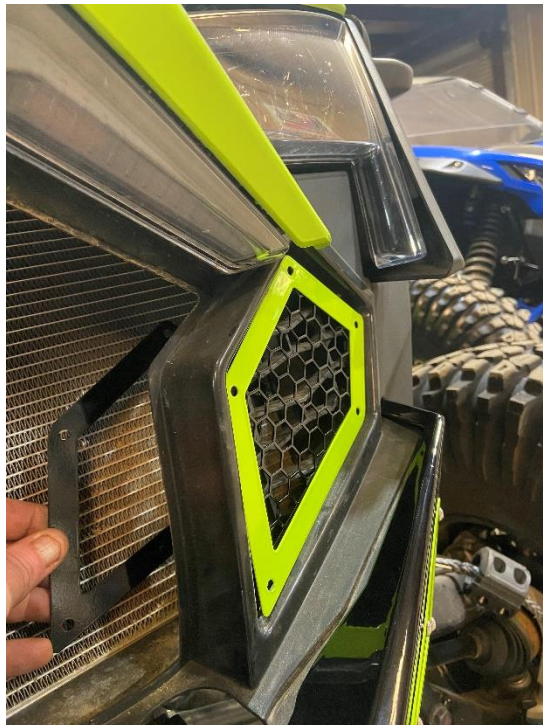

STEP 2:

With everything in place and lined up, insert the bolts and nuts.

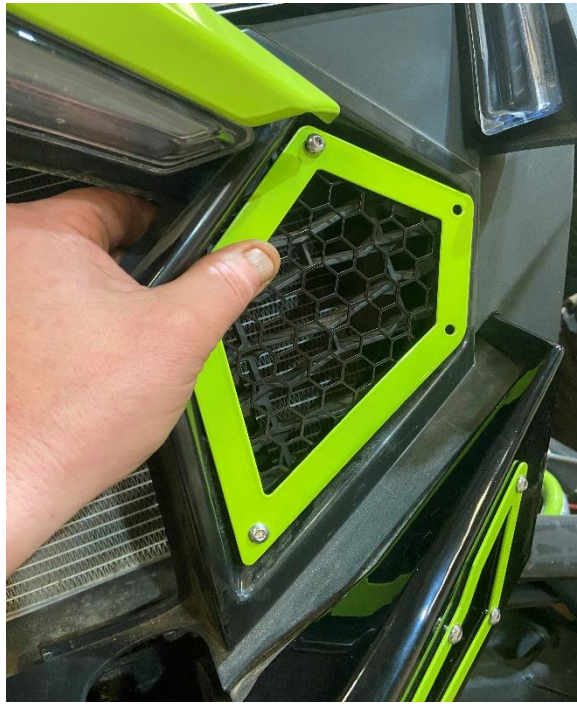

STEP 3:

Be careful not to tighten too tight as it will bow the cover pc.



STEP 5:

Repeat the steps for the remaining side.